Instructions (DFS-DSS-M002)



Product Introduction:

This product is from D.F.S Technology (HH) Ltd independent research and development, It has been independent intellectual property rights. It is open display for the Wobile Phone, MPA, MPF and other display stand of the real commodity. It has a good effectively anti-theft for the display products while the customer was touching and experiencing it. So that it leteustomer have stronger buy desire.

Function of the product:

- Main Function of the product
- 1. The customer experience in display.
 2. Anti-theft for display goods effectively.
 3. Charging for the display goods

Description of Accessories:

1. Aset of holder.



2. Power adapter quirements of our customers to configuration)



3. Several security display stand match one remote controller



- 4. One set of instrutions
- 5. One Srew

The structure of the holder



Operation steps:

- Insert the power adapter to charge for the holder. (Host DC hole next to the LED light will turn red, Then charging, fully charged the LED turns off)
- 2. Slide the switch on the bottom of the power, turn on power

- 2. Slide the switch on the holton of the power, turn on power.

 3. The remote controller aim at the signal receiver parallel, press the remote controller within ISmm to active the holder.

 4. Tear off the SM sticker of the holder botton.

 5. Put the holder on the clean table. (Wend to press at least for 10 minutes)

 6. Tear off the SM sticker of the contact touch, then put it on the back of displayed cell phone leaved to press at least for 10 minutes)

 7. Tear off the SM sticker of the small touch, then put it on the front side of the displayed cell phone (need to press at least for 10 minutes)
- When finished the seven steps, the holder will sound a beep, the LED light will flicker blue light once 5 seconds, the holder will in the work state.

Operation schematic drawing



Stepl: Insert the power adapter to charge for the holder.
(End of the power adapter DC kong, the other end of the power)



Step 2: Slide the switch on the bottom of the power, turn on power.





Step3: The remote controller aim at the signal receiver Parallel, press the remote controller within 15mm to Active the holder.
(The moment of pressing the romote button, the host will issue a bit of tone)



Step4:Tear off the 3M sticker of the holder bottom.



Step5: Put the holder on the clean table. (Need to press at least for 10 minutes)



Step 6: Goods will be displayed with screws above the host





The overall effect diagram

When finished the seven steps, the holder will sound a beep, the LED light will flicker blue light once 5 seconds, the holder will in the work state.

Notes:

- 1. Keep the controller at a shorter distance with the Signal receiver hole
- (within 15 mm) 2. avoid irradiating the Signal receiver hole by strong light

- 2. avoid irradiating the Signal receiver hole by strong light
 3. nake sure the surface is clean before sticking
 4. please use it after 24 hours after 38 sticker works
 5. The continuous flashing of Led indicator and the intermittent prompting
 sound indicate low power of the holder, which should be charged.
 6. the alarm will last for 4 minutes in a time
 7. before replacing the 38 sticker at the bottom of holder, you should use a
 blower heating the area around where the holder bottom and desktop were
 adhered, thus reakening the dadorption property and easier to separate.
 8. Reactivation is needed when LED indicator was lost or should be replaced
 for some reaches.

- b. Reactivation is needed when LLD indicator was isst or should be replaced for some reactivate the holder in the following two situations: (Dispose the steps as above (2) Most is glowed to the table, not easy to upplus, you can let the best in alarm, detection state, the host of the code. For example: you can upply the crystal in the crystal of the host side of the judk head, so that the host in a norvalarm states.

Contact way:

D.F.S Technology (HK) Co., Limited
D.F.S Metal Goods Co., Ltd
TEL: *86-755-2909174 / 27058017/27689276
FEB-186-755-2909174 / 27058017/27689276
FEB-186-756-75689276
FEB-186-75689276
FEB-186-7568927
FEB-186-7568927
FEB-186-7568927
FEB-186-7568927
FEB